



R I M A G E 3 6 0 i™
CREATE. BURN. PRINT.™

Setup and Installation for Windows®



If you are unfamiliar with the procedures in this document, ask your computer technician for help or refer to your PC documentation.

Before you begin:

- You must have administrative privileges to install and operate the Rimage 360i software on your PC.
- Do not plug in any cables until you are instructed to do so.
- Obtain a computer that meets the PC specifications listed in the 'Learn more' section of your *Rimage 360i User Guide*.

1 Install the Rimage 360i software.

ⓘ **Important!** You must have administrative privileges to install and operate the Rimage 360i software on your PC.

a. Power on your PC.

b. At your PC, insert the **Rimage 360i Software disc** in the PC disc drive.



📎 **Note:** If the software installation does not start automatically, **navigate:** Start > Run > Browse and select the **Setup** file from the disc.

c. Follow the onscreen prompts to complete the installation.

In Windows 2000, a warning message that the software you are about to install does not contain a digital signature displays. To install the software, select **Yes**.

In Windows XP, a warning message that the software has not passed Windows Logo testing displays. To install the software, select **Continue Anyway**.

d. When the *Installation Status* screen displays *Rimage software was successfully installed*, select **Finish**.


📎 **Note:** Leave the software disc in the disc drive until you have completed step 3.

2 Connect the Rimage 360i cables.

a. Connect the **USB 2.0 cable** from the Rimage 360i to your PC USB 2.0 port.


📎 **Note:** The PC must have a USB 2.0 port. For more information, refer to the computer specifications listed in the 'Learn More' section of your *Rimage 360i User Guide*.

b. Connect the **power cord** from the Rimage 360i to the power outlet.

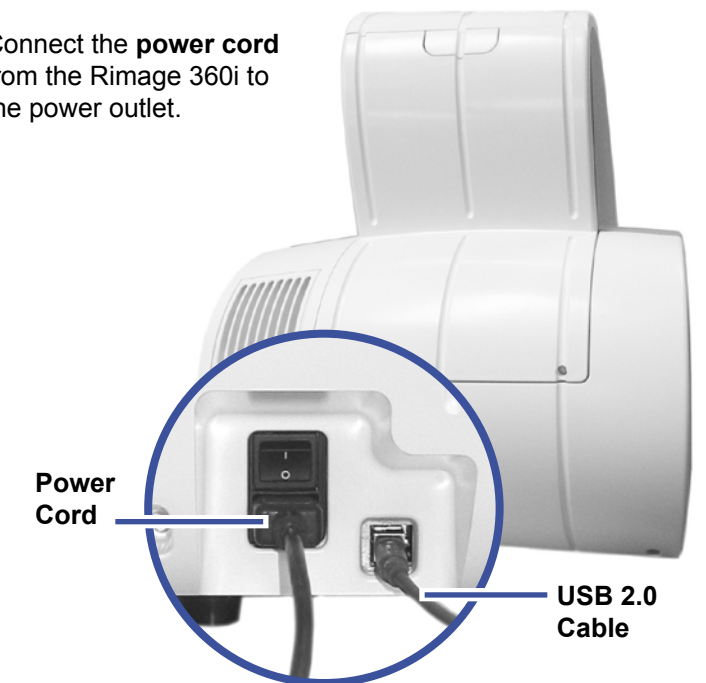

3 Install the printer driver.

- a. To power on the Rimage 360i, press the **power switch**. The Rimage 360i initializes.

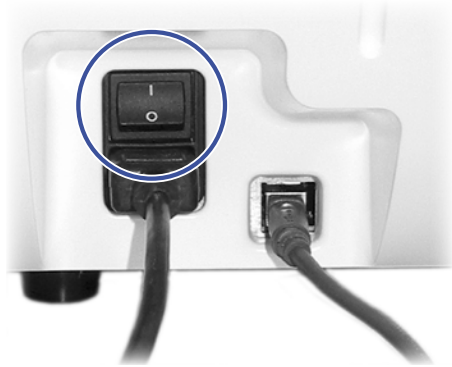

In Windows 2000, the printer driver installation completes automatically.

In Windows XP, the *Found New Hardware Wizard* displays. To install the required printer driver, complete the following prompts:

- i. In the *Found New Hardware Wizard*, select **No, not this time**. Windows searches for the installed driver.
- ii. Select **Next**. The window updates.
- iii. Select **Install the software automatically**.
- iv. Select **Next**. A warning message that the software has not passed *Windows Logo Testing* displays.
- v. Select **Continue Anyway**. The driver installation starts.
- vi. At the *Completing the Found New Hardware Wizard* window, select **Finish**.

- b. Remove the **Rimage 360i Software disc** from the PC disc drive.

4 Install the ink cartridges.

- a. Open the **ink cartridge access door**.

Ink Cartridge Access Door



- b. When the ink cartridge carriage is still, lift both **ink cartridges latches**.

- c. Slide the matching **ink cartridges** into the matching cartridges as shown.

Ink cartridge latch



- d. Close the **ink cartridge latches**.

- e. Close the **ink cartridge access door**. The printer initializes.

- f. Align the **ink cartridges**. For specific instructions, refer to the *Rimage 360i User Guide*.

5 Activate your software.

You have 30 days to activate your software. Until your software is activated, you will be prompted to activate your software each time you use it.

6 Learn more.

For more information about operating and maintaining your Rimage 360i, refer to your *Rimage 360i User Guide*.

After software installation, a version of the *Rimage 360i User Guide* in the language you selected during software installation is available in PDF format on your hard drive at Start > Programs > Rimage > Manuals.

For information about the software included with your Rimage 360i, refer to the online help.

For additional support and product information, go to www.rimage.com/support.html.